

Description A temporary stream crossing is a bridge or culvert across a stream or watercourse for short-term use by construction vehicles or heavy equipment. Vehicles moving over unprotected stream banks will damage the bank, thereby releasing sediments and degrading the stream bank. A stream crossing provides a means for construction vehicles to cross streams or watercourses without moving sediment to streams, without damaging the streambed or channel, and without causing flooding.

- Applications**
- A temporary stream crossing is used when heavy equipment should be moved from one side of a stream channel to another, or where light-duty construction vehicles have to cross the stream channel frequently for a short period of time. Temporary stream crossings should be installed only when it is necessary to cross a stream and a permanent crossing is not feasible or not yet constructed.
 - The specific loads and the stream conditions will dictate what type of stream crossing to employ.
 - Where available materials and designs are adequate to bear the expected loadings, bridges are the preferred method to cross a stream as they provide the least obstruction to flows and fish migration.
 - Culverts are the most common type of stream crossings and are relatively easy to construct. A pipe (to carry the stream flow) is laid into the channel and covered by gravel

Limitations

Drainage area – N/A	Maximum slope – N/A
Minimum bedrock depth – 2 ft	Minimum water table - N/A
NRCS soil type - ABCD	Freeze/thaw – good
Drainage/flood control – yes	

- Bridges are expensive to design and install. These costs may make it difficult to justify using a bridge as a temporary crossing in some situations.
- Culverts cause greater disturbance during installation and removal. In sensitive stream systems, these impacts may not be justifiable.
- Always attempt to minimize or eliminate the need to cross streams. Temporary stream crossings are a direct source of pollution; therefore, every effort should be made to use an alternate method such as a longer detour. When it is absolutely necessary to cross a stream, a well-planned approach will minimize damage to the stream bank and reduce erosion.
- Use of the following stream crossing measures below the high-water mark of a stream or other water body (waters of the U.S.) should be carefully evaluated due to Section 404 permit requirements. If the project will remain a Categorical Excluded (Cat-Ex) project, you may proceed if the situation is discussed in the Cat-Ex. Otherwise, Section 404 permitting (401 Certification) may be required. The design of temporary stream crossings involves extensive knowledge of hydrologic processes and, therefore, should be designed by a Professional Engineer.

**Targeted
Pollutants**

Sediment
Hydrocarbons

**Design
Parameters**

General:

In-stream excavation should be limited to only that necessary to allow installation of the temporary bridge or culvert as described below:

- Temporary bridges pose the least potential for creating barriers to aquatic migration. The construction of a temporary bridge or culvert should not cause a significant water level difference between the upstream and downstream water surface elevations.
- The temporary waterway crossing should be at right angles to the stream. Where approach conditions dictate, the crossing may vary 15 degrees from a line drawn perpendicular to the centerline of the stream at the intended crossing location.
- The centerline of both roadway approaches should coincide with the crossing alignment centerline for a minimum distance of 50 ft from each bank of the waterway being crossed. If physical or right-of-way restraints preclude the 50 ft minimum, a shorter distance may be provided. All fill materials associated with the roadway approach should be limited to a maximum height of 2 ft above the existing flood plain elevation.
- A water diverting structure such as a swale should be constructed (across the roadway on both roadway approaches) 50 ft (maximum) on either side of the waterway crossing. This will prevent roadway surface runoff from directly entering the waterway. The 50 ft is measured from the top of the waterway bank. Design criteria for this diverting structure should be in accordance with the BMP fact sheet in this catalog for the individual design standard of choice. If the roadway approach is constructed with a reverse grade away from the waterway, a separate diverting structure is not required.
- All crossings should have one traffic lane. The minimum width should be

- 12 ft with a maximum width of 20 ft.
- All temporary crossings should be removed within 14 calendar days after the structure is no longer needed.

Materials:

- No earth or soil materials should be used for construction within the waterway channel. (3/4 in. to 4 in.), also referenced as AASHTO designation No. 1, the minimum acceptable aggregate size for temporary crossings. Larger aggregates will be allowed.
- Filter cloth is a fabric consisting of either woven or nonwoven plastic, polypropylene, or nylon and is used to distribute the load, retain fines, allow increased drainage of the aggregate and reduce mixing of the aggregate with the subgrade soil. Filter cloths, such as Mirafi, Typar, Adva Filter, Polyfilter X, or an approved equivalent, should be used as required by the specific method.

Considerations for Choosing a Specific Method (Bridge or Culvert):

The following criteria for erosion and sediment control should be considered when selecting a specific temporary access waterway crossing standard method:

- Select standard design methods that will least disrupt the existing terrain of the stream reach. Consider the effort that will be required to restore the area after the temporary crossing is removed.
- Locate the temporary crossing where there will be the least disturbance to the soils of the existing waterway banks. When possible locate the crossing at the point receiving minimal surface runoff.
- The physical constraints of a site may preclude the selection of one or more of the standard methods.
- The time of year may preclude the selection of one or more of the standard methods due to fish spawning or migration restrictions.
- Vehicular loads, traffic patterns, and frequency of crossings should be considered in choosing a specific method.
- The standard methods will require various amounts of maintenance. The bridge method should require the least maintenance, whereas the ford method will probably require more intensive maintenance.
- Ease of removal and subsequent damage to the waterway should be primary factors in considering the choice of a standard method.

Temporary Bridge

- This is the preferred method for temporary access waterway crossings. Normally, bridge construction causes the least disturbance to the waterway bed and banks when compared to culverts.
- Most bridges can be quickly removed and reused.
- Temporary access bridges pose the least chance for interference with fish migration when compared to the other temporary access waterway crossings.

Temporary Culvert

- A temporary access culvert is a structure consisting of a section(s) of circular pipe, pipe arches, or oval pipes of reinforced concrete, corrugated metal, or structural plate, which is used to convey flowing water through the crossing.
- Temporary culverts are used where (1) the channel is too wide for normal bridge construction, or (2) anticipated loading may prove unsafe for single span bridges.
- Temporary culverts can be salvaged and reused.

Construction Guidelines

Temporary Bridge

- Construction, use, or removal of a temporary access bridge will not normally have any time-of-year restrictions since construction, use, or removal should not affect the stream or its banks.
- A temporary bridge structure should be constructed at or above bank elevation to prevent the entrapment of floating materials and debris.
- Abutments should be placed parallel to and on stable banks.
- Bridges should be constructed to span the entire channel. If the channel width exceeds 8 ft (as measured from top-of-bank to top-of-bank) then a footing, pier or bridge support may be constructed within the waterway. One additional footing, pier or bridge support will be permitted for each additional 8-ft width of the channel. However, no footing, pier or bridge support will be permitted within the channel for waterways less than 8 ft wide.
- Stringers should either be logs, sawn timber, prestressed concrete beams, metal beams, or other approved materials.
- Decking materials should be of sufficient strength to support the anticipated load. All decking members should be placed perpendicular to the stringers, butted tightly, and securely fastened to the stringers. Decking materials should be butted tightly to prevent any soil material tracked onto the bridge from falling into the waterway below.
- Run planking (optional) should be securely fastened to the length of the span. One run plank should be provided for each track of the equipment wheels. Although run planks are optional, they may be necessary to properly distribute loads.
- Curbs or fenders may be installed along the outer sides of the deck. Curbs or fenders are an option that will provide additional safety.
- Bridges should be securely anchored at only one end using steel cable or chain. Anchoring at only one end will prevent channel obstruction in the event that floodwaters float the bridge. Acceptable anchors are large trees, large boulders, or driven steel anchors. Anchoring should be sufficient to prevent the bridge from floating downstream and possibly causing an obstruction to the flow.
- All areas disturbed during installation should be stabilized within 14 calendar days of that disturbance.

Temporary Culvert

- All culverts should be strong enough to support their cross sectional area under maximum expected loads.
- The size of the culvert pipe should be the largest pipe diameter that will

fit into the existing channel without major excavation of the waterway channel or without major approach fills. If a channel width exceeds 3 ft, additional pipes may be used until the cross sectional area of the pipes is greater than 60% of the cross sectional area of the existing channel. The minimum size culvert that may be used is a 12-in. diameter pipe.

- The culvert(s) should extend a minimum of 1 ft beyond the upstream and downstream toe of the aggregate placed around the culvert. In no case should the culvert exceed 40 ft in length.
- Filter cloth should be placed on the streambed and stream banks prior to placement of the pipe culvert(s) and aggregate. The filter cloth should cover the streambed and extend a minimum 6 in. and a maximum 1 ft beyond the end of the culvert and bedding material. Filter cloth reduces settlement and improves crossing stability.
- The invert elevation of the culvert should be installed on the natural streambed grade to minimize interference with fish migration (free passage of fish).
- The culvert(s) should be covered with a minimum of 1 ft of aggregate. If multiple culverts are used they should be separated by at least 12 in. of compacted aggregate fill.
- All areas disturbed during culvert installation should be stabilized within 14 calendar days of the disturbance.



Maintenance **Temporary Bridge**

- Periodic inspections should be performed by the user to ensure that the bridge, streambed, and stream banks are maintained and not damaged.
- Maintenance should be performed, as needed, to ensure that the structure complies with the standard and specifications. This should include removal and disposal of any trapped sediment or debris. Sediment should be disposed of outside of the flood plain and stabilized.
- When the temporary bridge is no longer needed, all structures, including abutments and other bridging materials, should be removed within 14 calendar days. In all cases, the bridge materials should be removed within 1 year of installation.
- Final clean-up should consist of removal of the temporary bridge from the waterway, protection of banks from erosion, and removal of all construction materials. All removed materials should be stored outside the waterway flood plain.
- Removal of the bridge and clean up of the area should be accomplished without construction equipment working in the waterway channel.
- All areas disturbed during removal should be stabilized within 14 calendar days of that disturbance.








Temporary Culvert

- Periodic inspection should be performed to ensure that the culverts, streambed, and stream banks are not damaged, and that sediment is not entering the stream or blocking fish passage or migration.
- Maintenance should be performed, as needed in a timely manner to ensure that structures are in compliance with this standard and specification. This includes removal and disposal of any trapped sediment or debris.

- Sediment should be disposed of and stabilized outside the waterway flood plain.
- When the crossing has served its purpose, all structures, including culverts, bedding and filter cloth materials, should be removed within 14 calendar days. In all cases, the culvert materials should be removed within 1 year of installation.
- Final clean-up should consist of removal of the temporary structure from the waterway, removal of all construction materials, restoration of original stream channel cross section, and protection of the stream banks from erosion. Removed material should be stored outside of the waterway flood plain.
- Removal of the structure and clean up of the area should be accomplished without construction equipment working in the waterway channel.
- All areas disturbed during culvert removal should be stabilized within 14 calendar days of the disturbance.

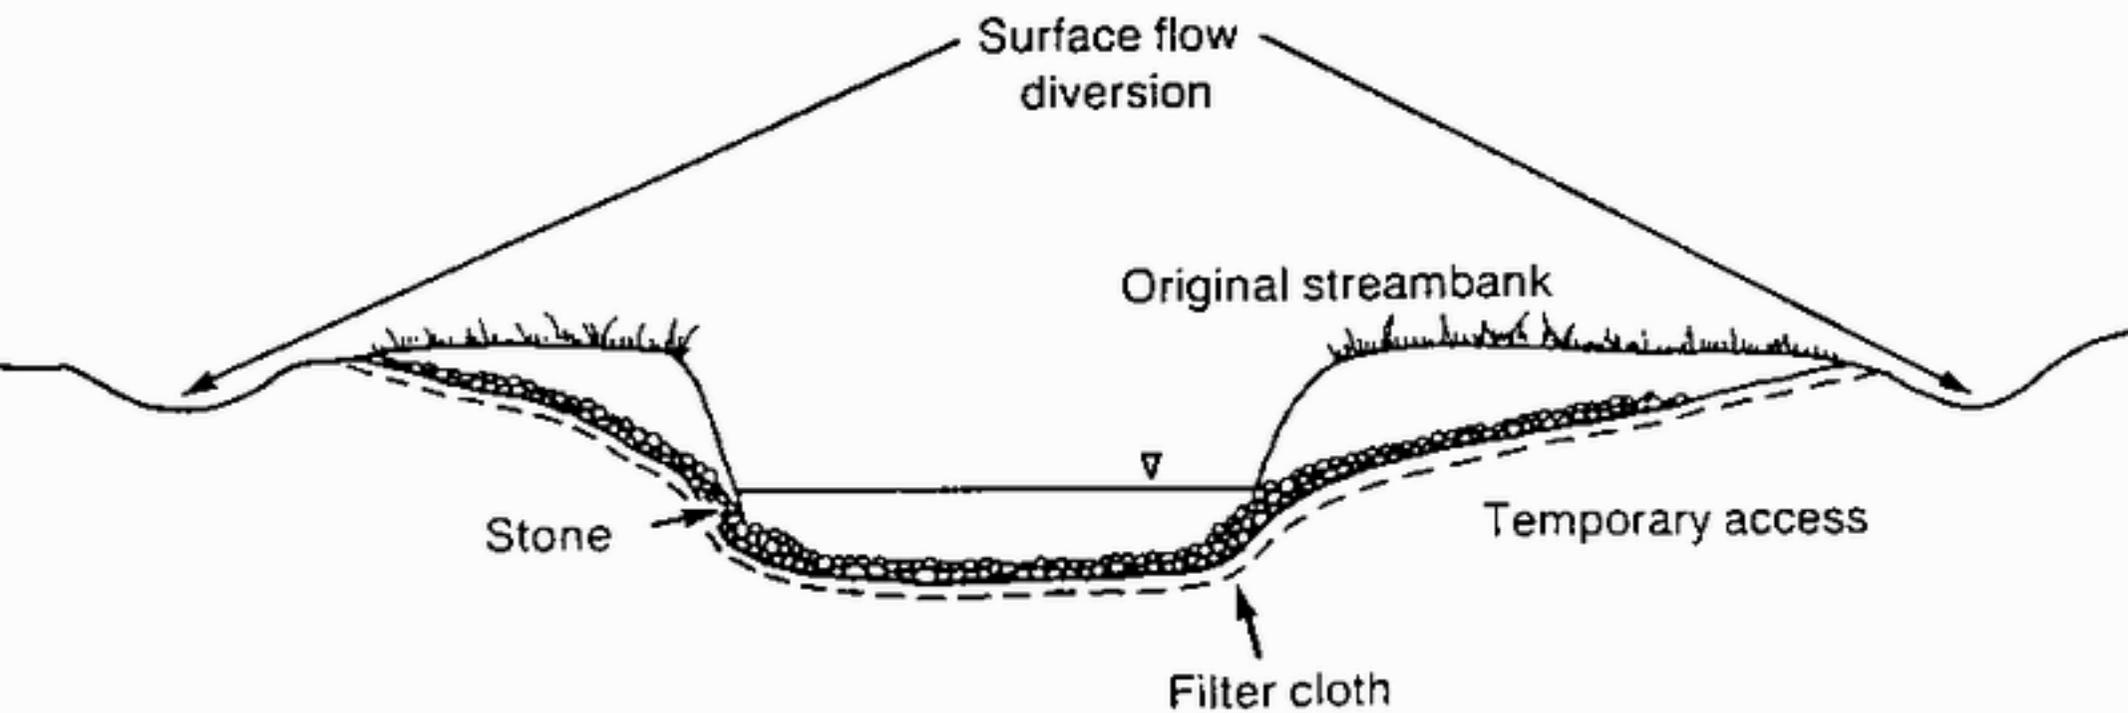
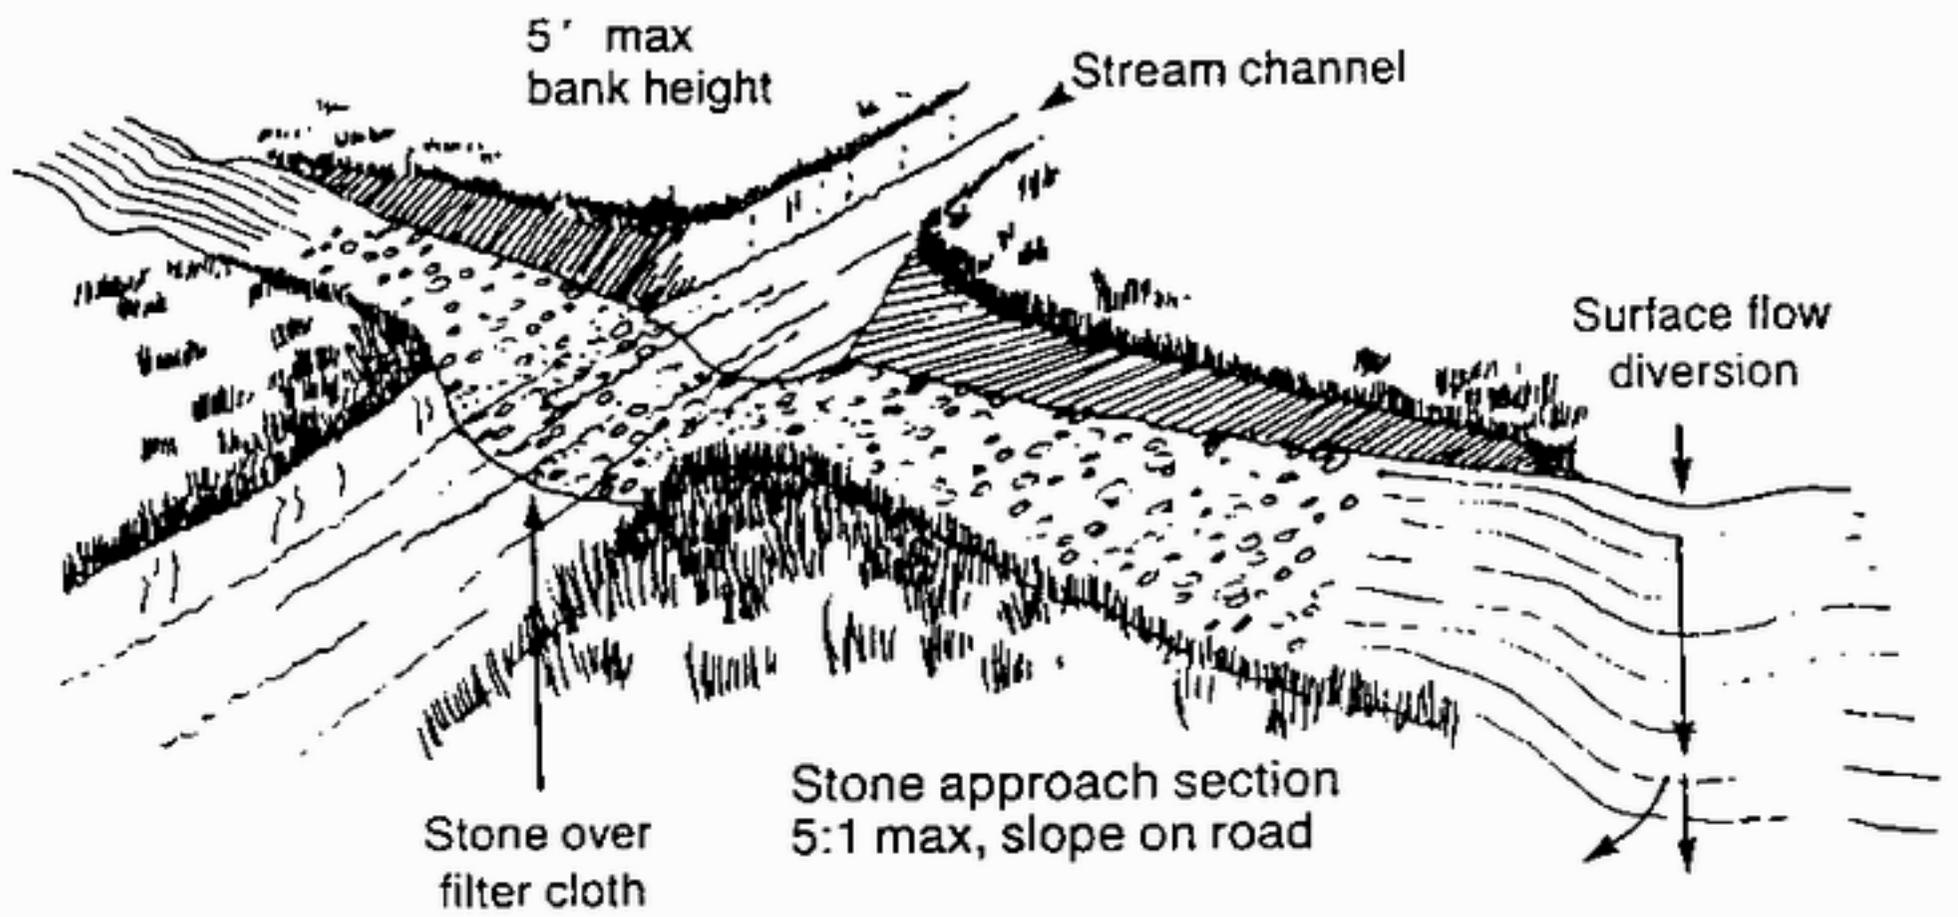


A well constructed ford offers little obstruction to flow while safely handling heavy loadings.

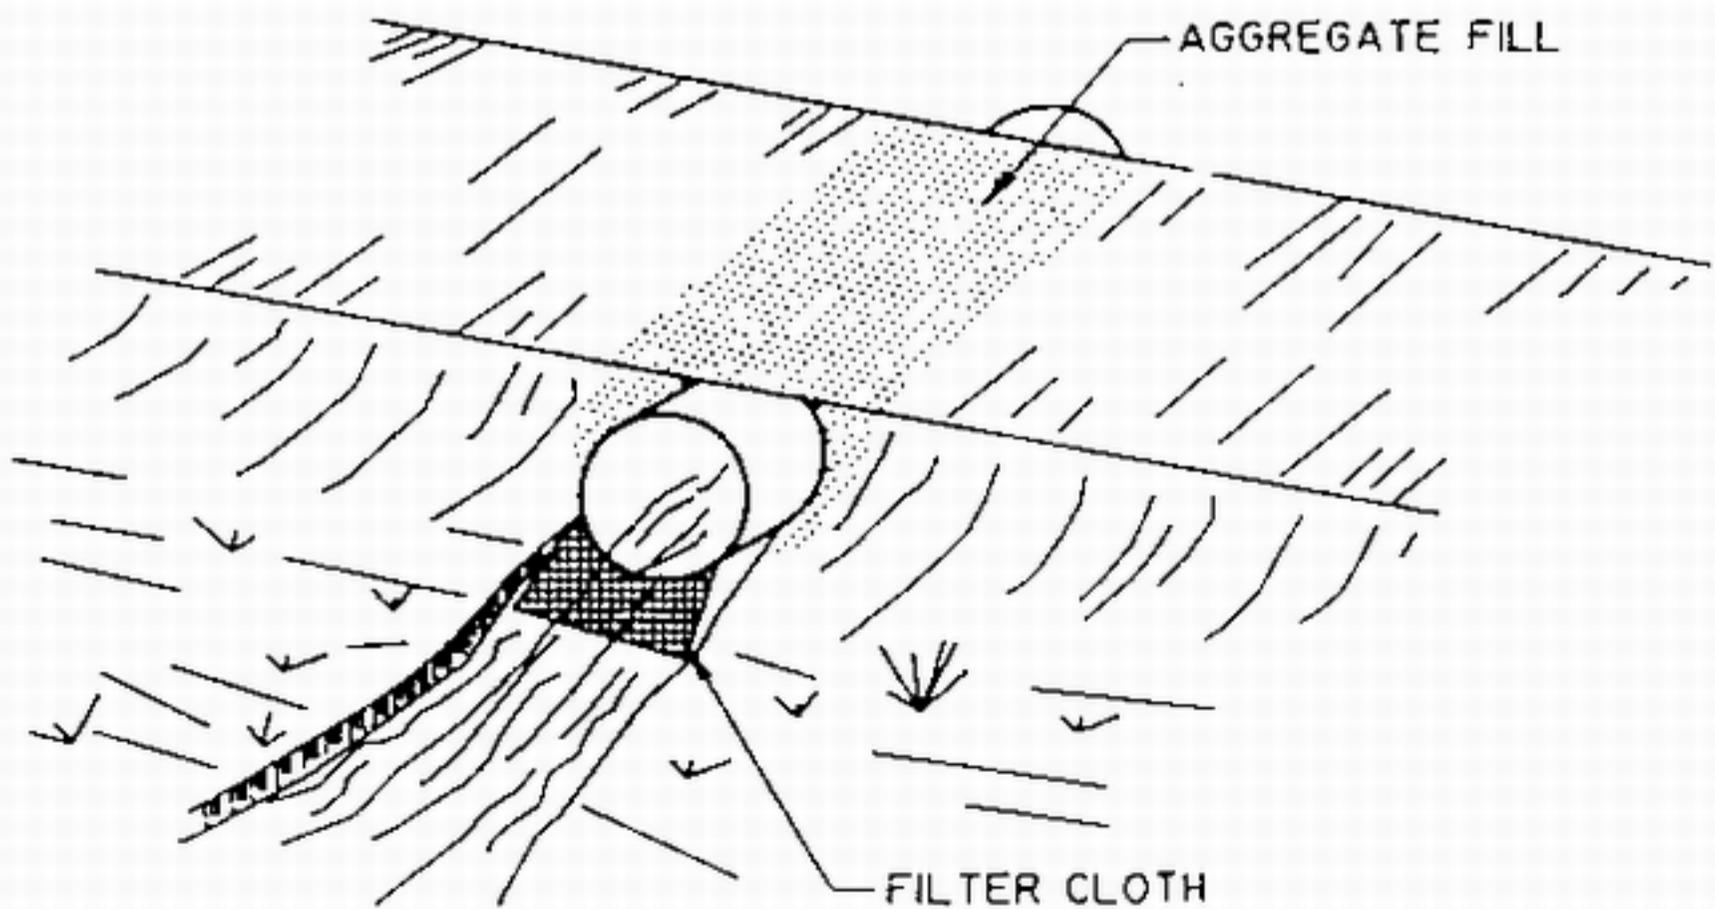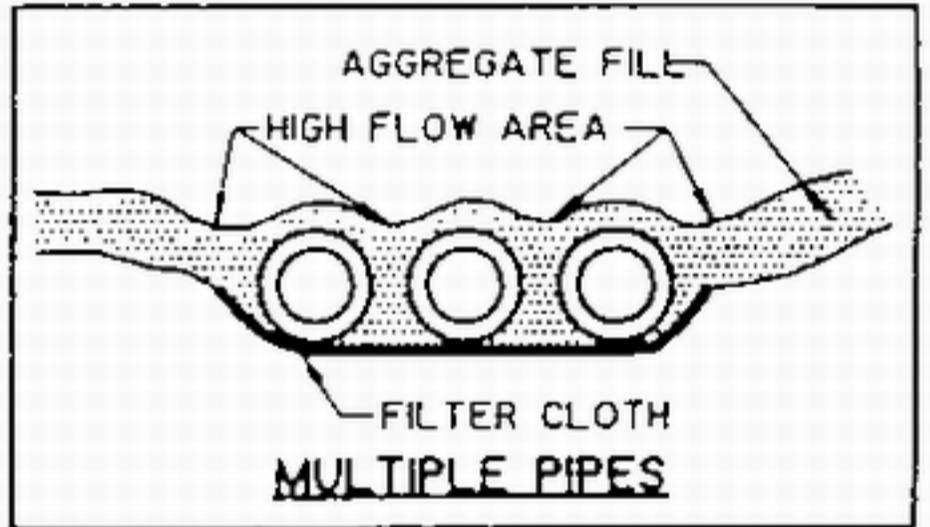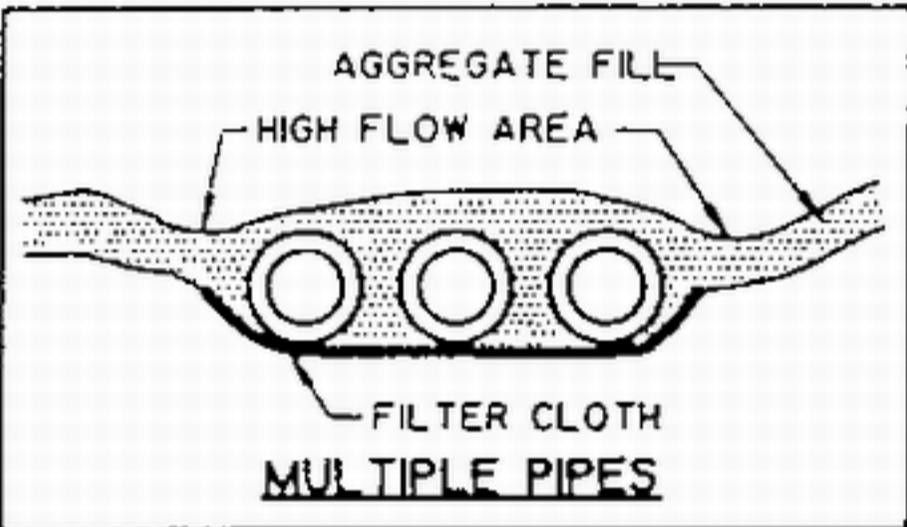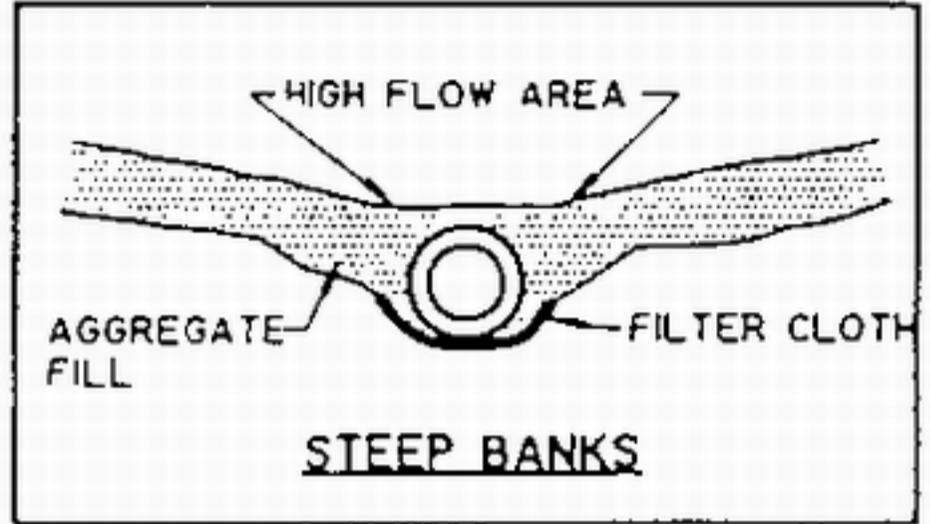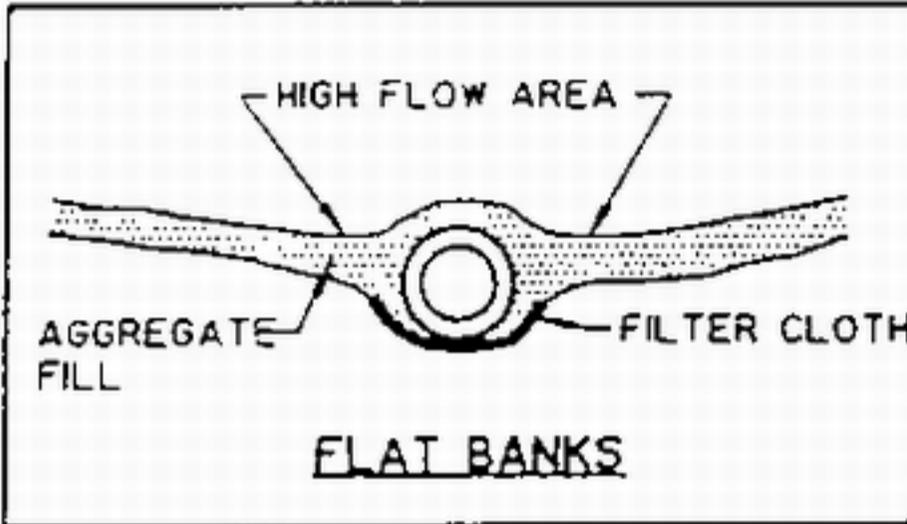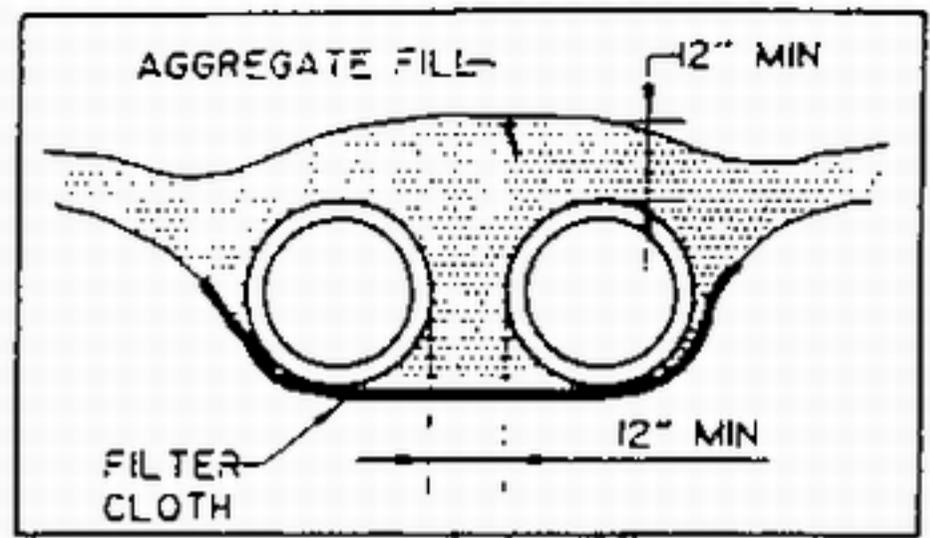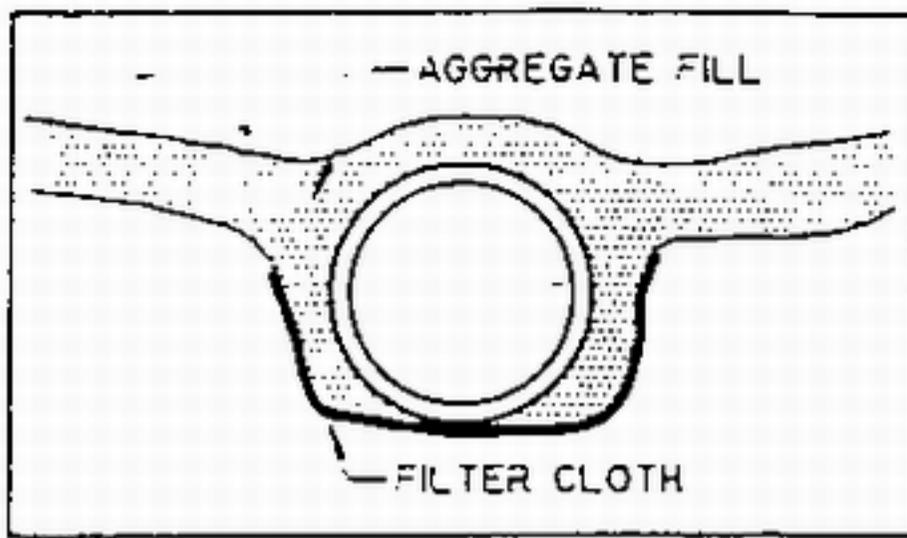

TEMPORARY ACCESS CULVERT

TEMPORARY ACCESS BRIDGE

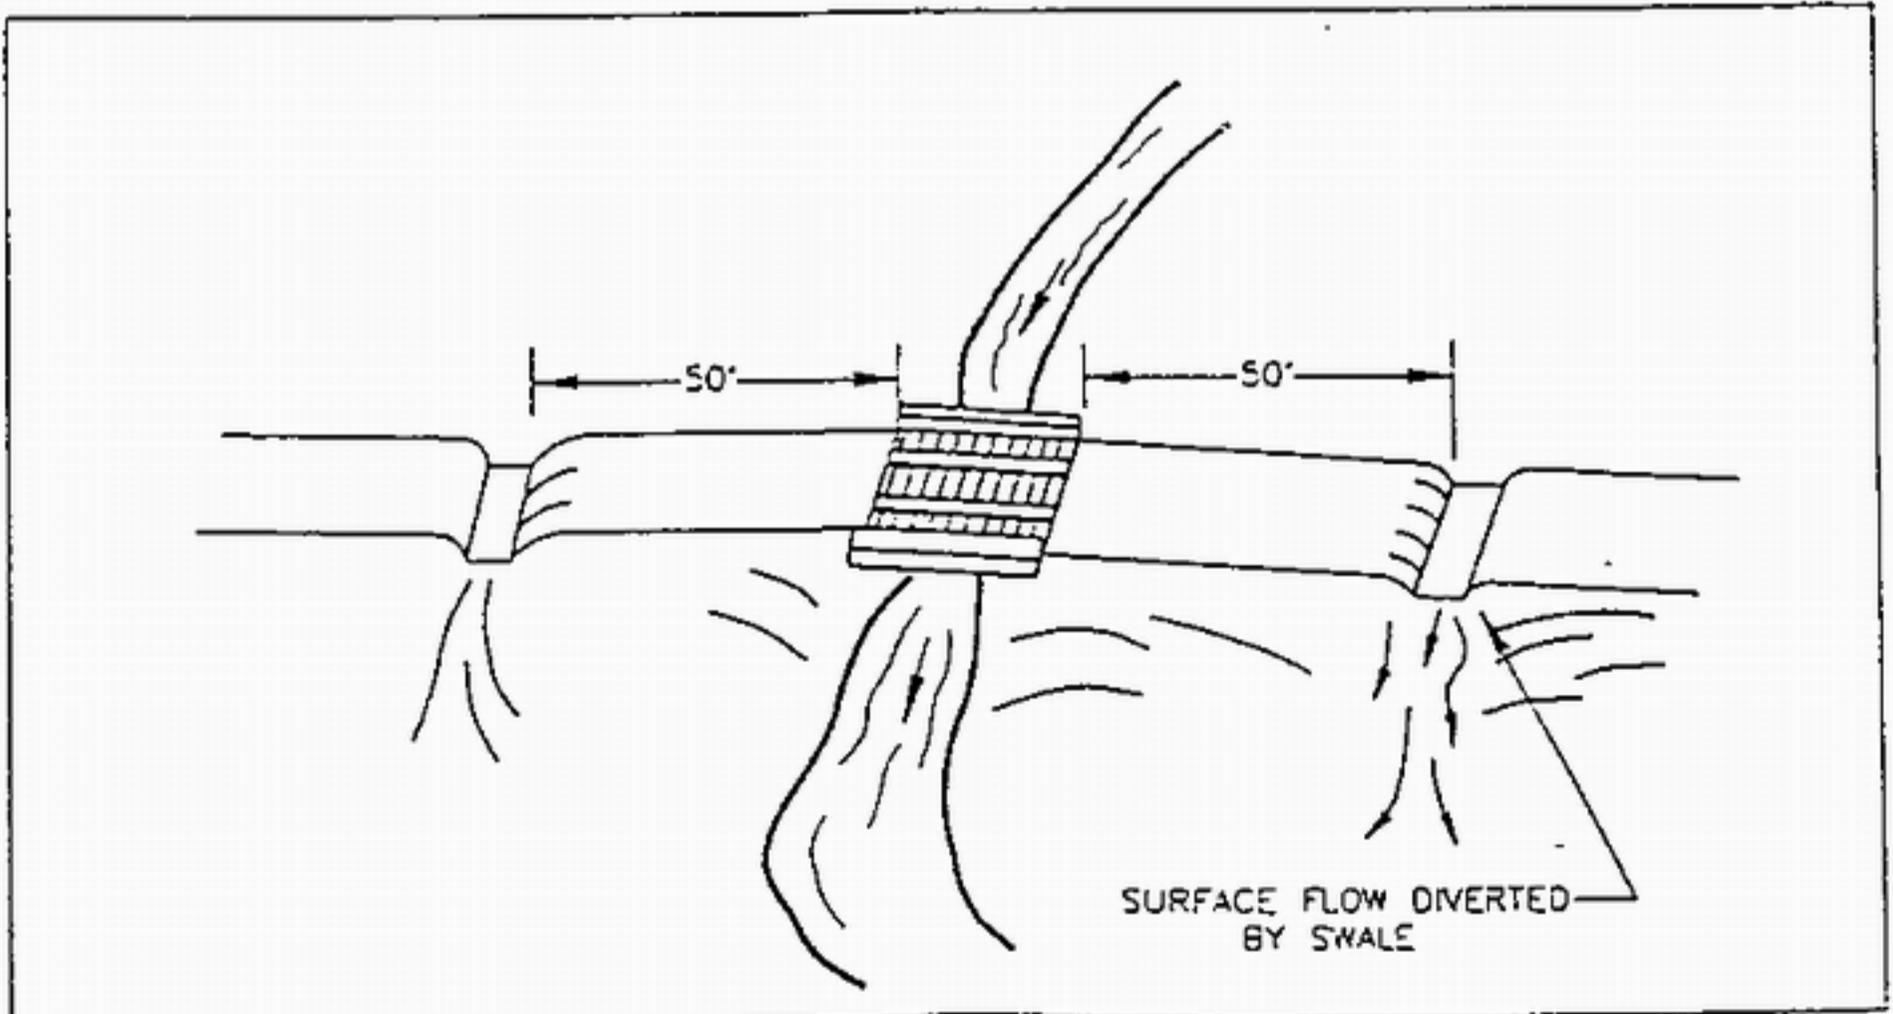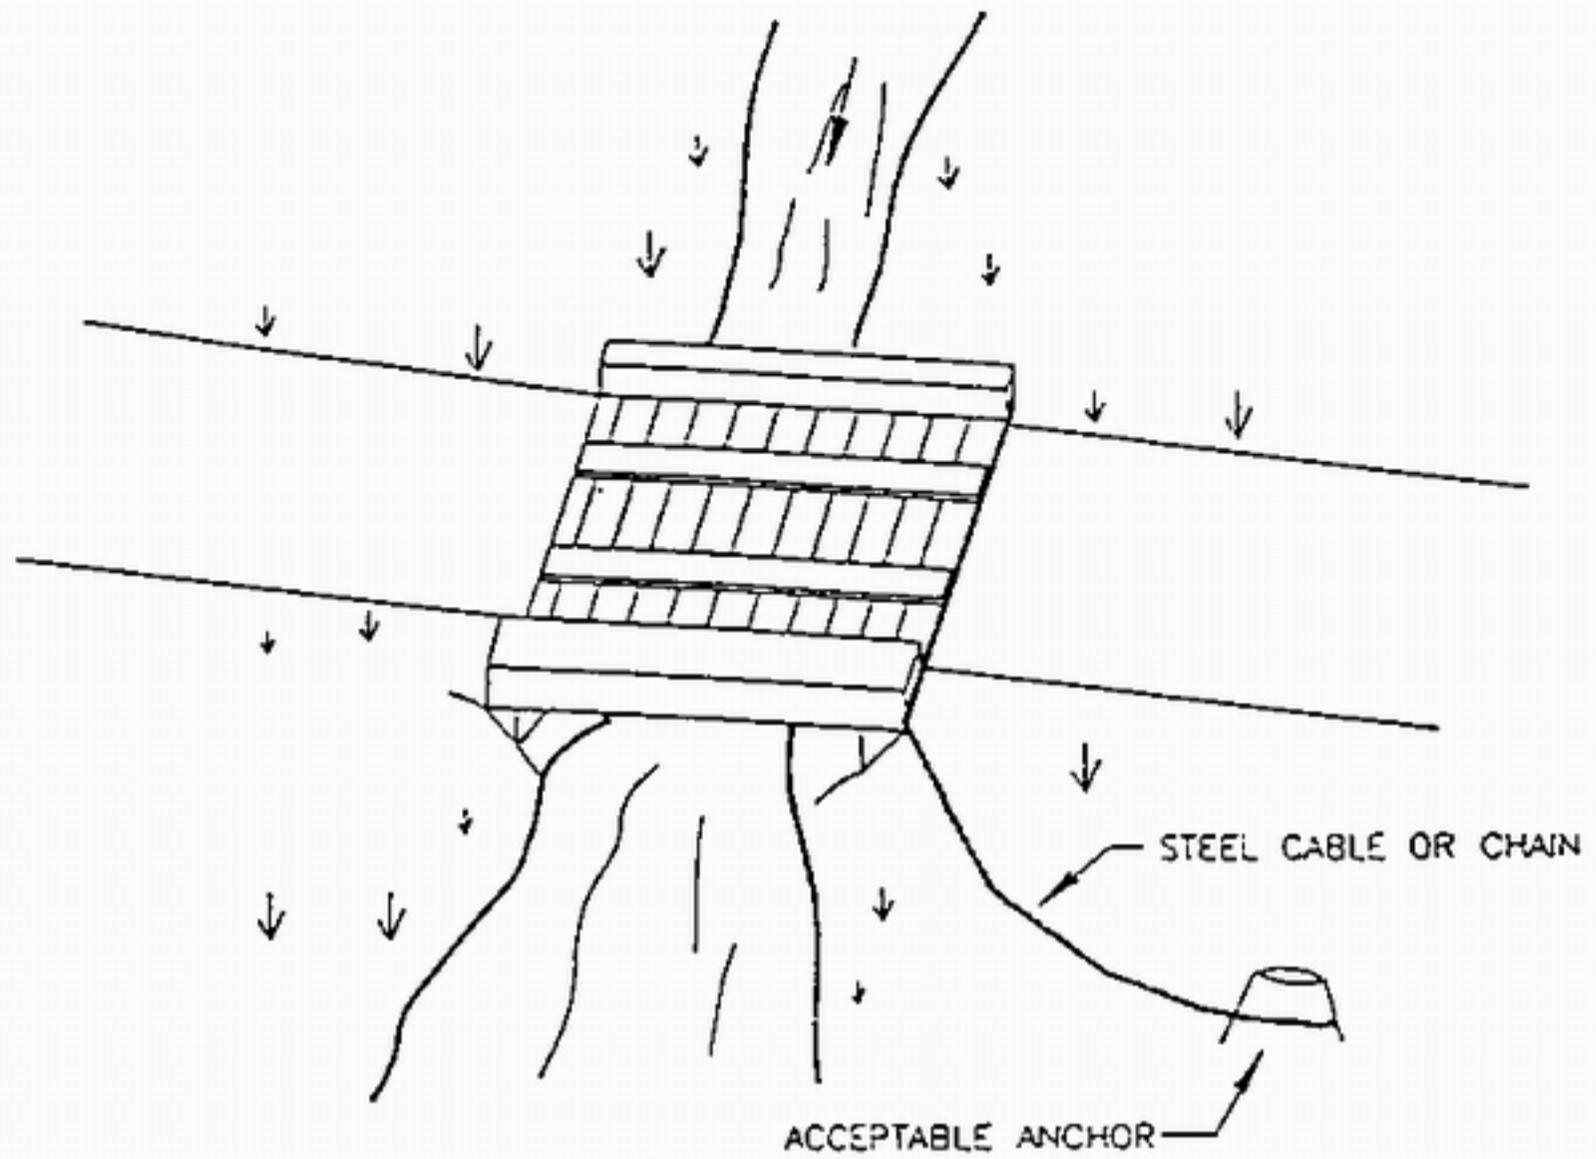


U.S. DEPARTMENT OF AGRICULTURE
SOIL CONSERVATION SERVICE

TOOTHMAN-ORTON ENGINEERING COMPANY
BOISE, IDAHO McCALL, IDAHO


TEMPORARY ACCESS BRIDGE

STANDARD
DRAWING

TAB-1

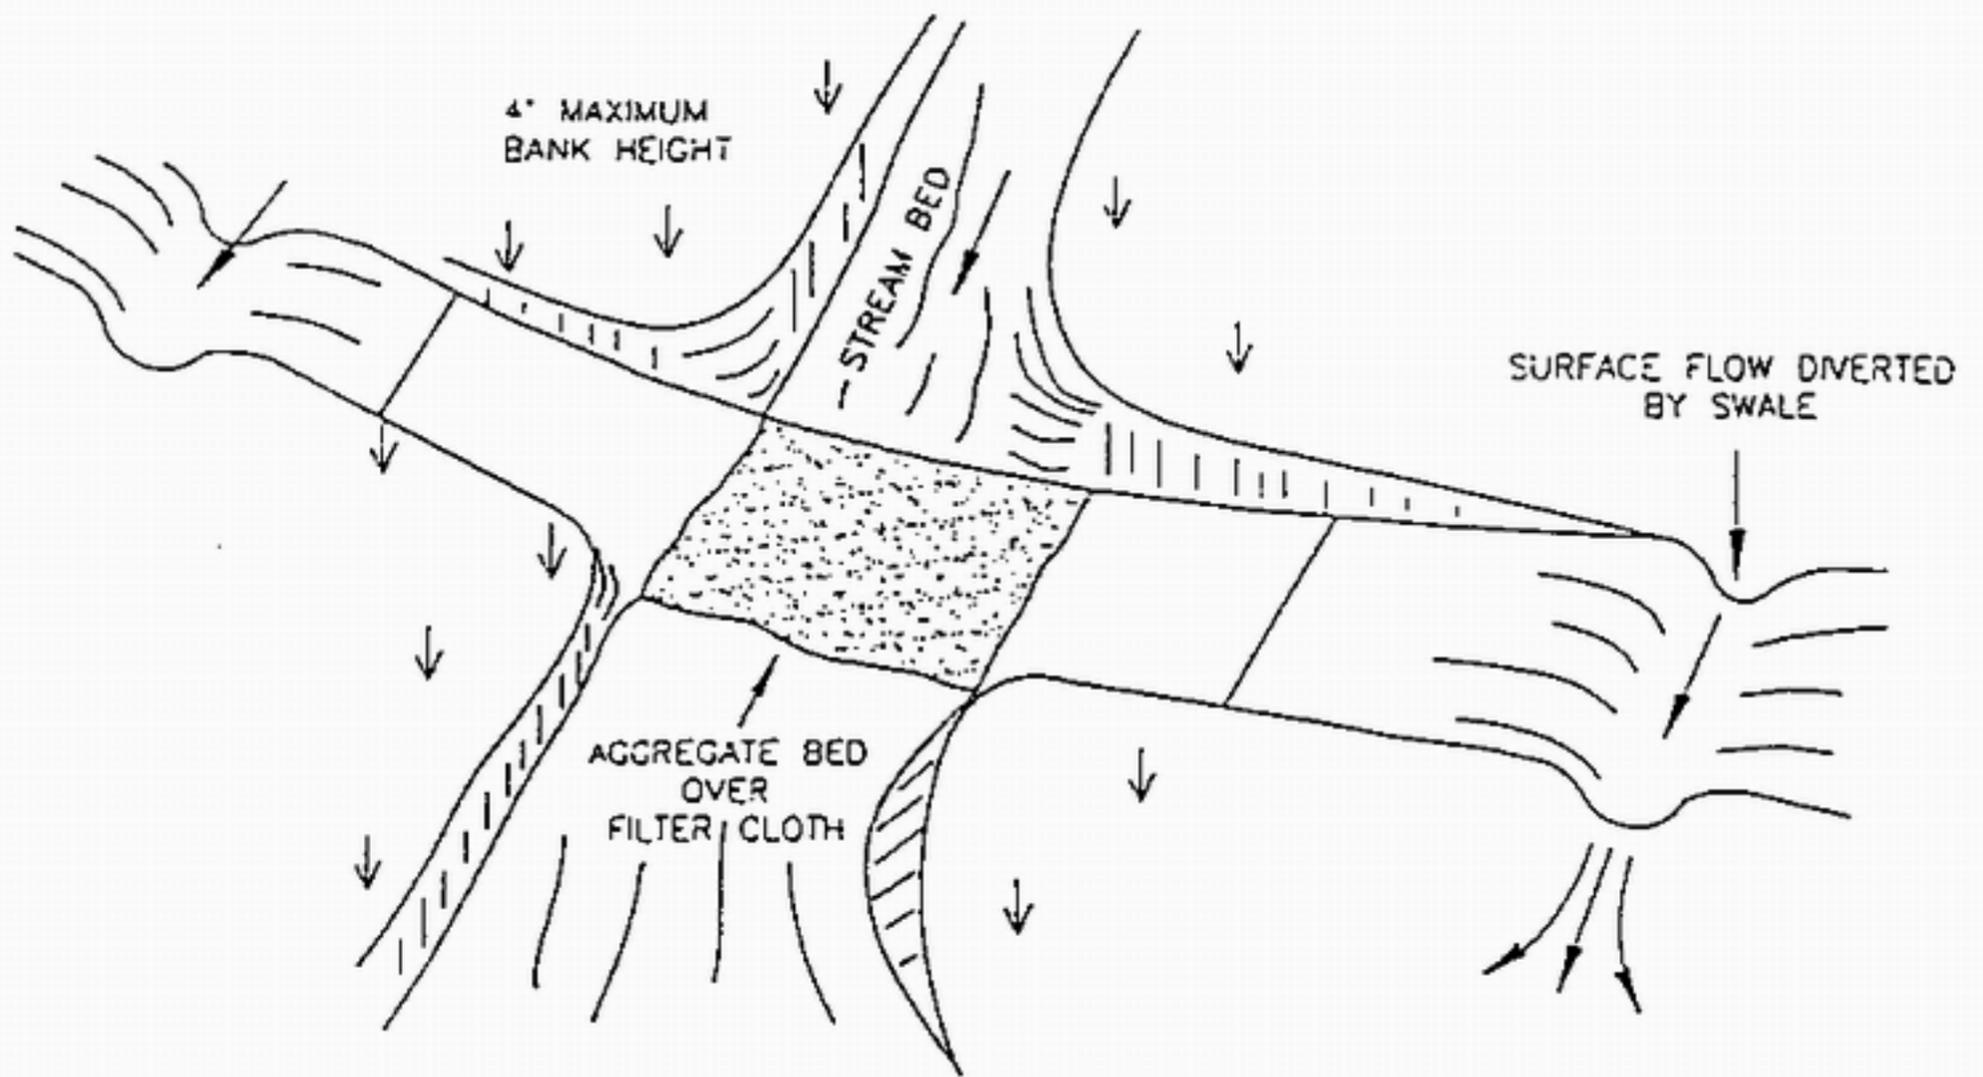

AGGREGATE APPROACH
5:1 MAXIMUM SLOPE ON ROAD

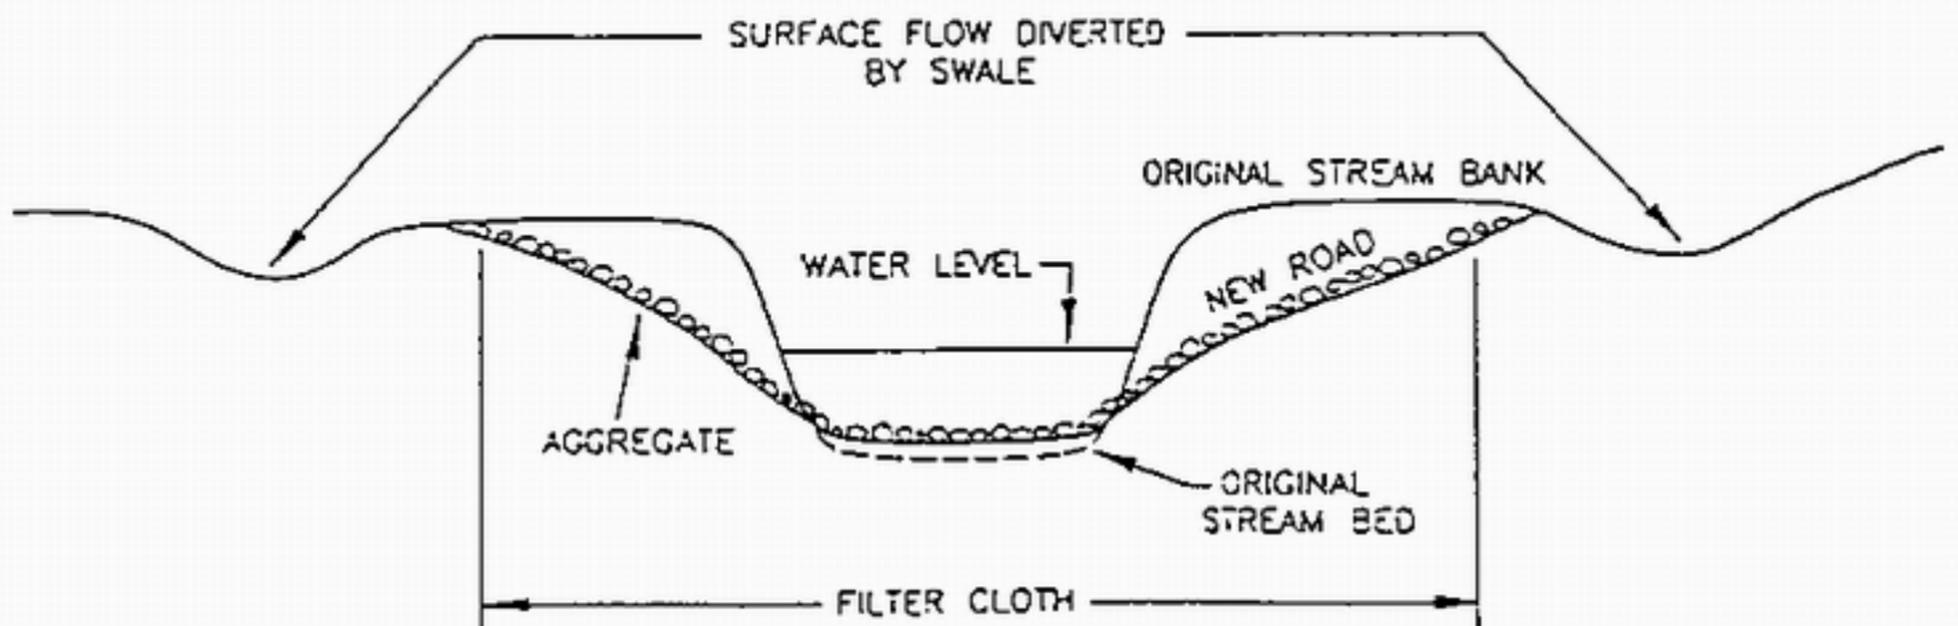

U.S. DEPARTMENT OF AGRICULTURE
SOIL CONSERVATION SERVICE

TOOTHMAN-ORTON ENGINEERING COMPANY
BOISE, IDAHO McCALL, IDAHO

TEMPORARY ACCESS CULVERT

STANDARD
DRAWING

TAF-1